

D

**Montage-
anleitung
Kaltabfrage**

GB

**Mounting
Open load
detection**

F

**Instructions de
montage
Boîtier de détection
de défaillance
de lampes**

 

S

**Monterings-
anvisning
Funktionskontroll
Anslutningar**

Hella Best.-Nr.
Hella Part. No.
Référence Hella
Hella best. nr.



5DS 009 602-xxx

Ø 6 mm

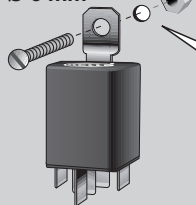

CLICK

Steckerbelegung
Pin configuration
Repérage bornes
Anslutningar

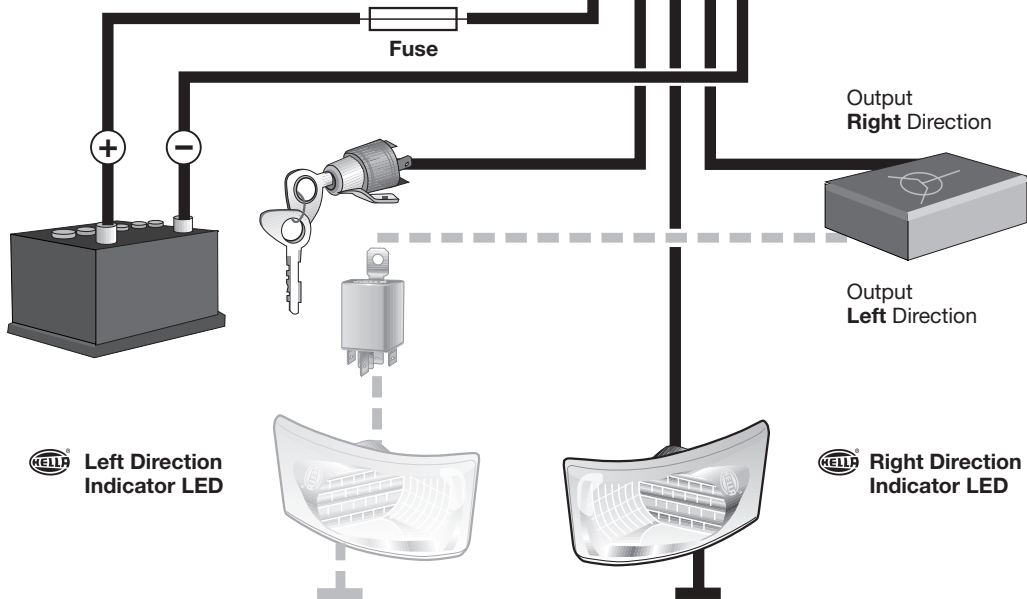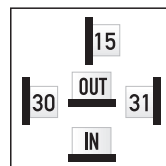

HELLA Left Direction
Indicator LED

HELLA Right Direction
Indicator LED



NL

**Montage-
handleiding
Koude Controle**

E

**Instrucciones
de montaje
Comprobación en
abierto**

I

**Instruzioni di
montaggio
Test a freddo**


 

FIN

**Asennusohje
Valojen
toimivuutta
tarkkaileva
ohjainlaite**

Hella Bestellnr.
N° de pedido Hella
No d'ordine Hella
Hella - nro



5DS 009 602-xxx

Ø 6 mm

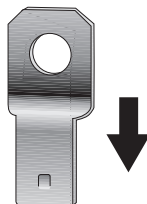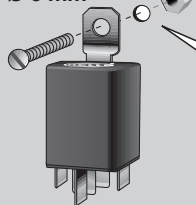

CLICK

Stekkeropstelling
Disposición de clavijas
Disposizione attacchi
Navoitus

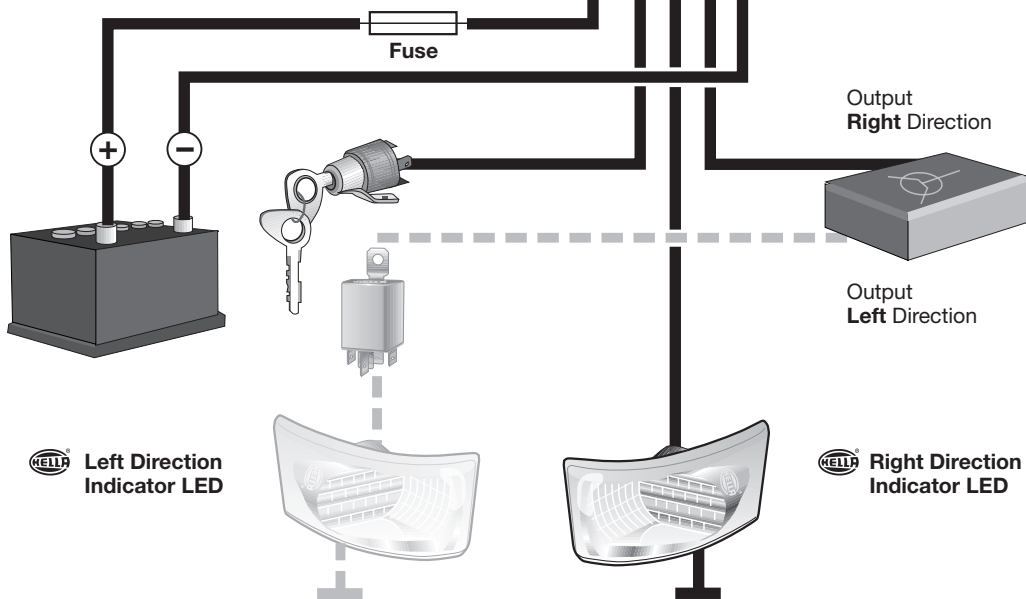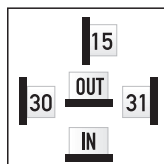

HELLA Left Direction
Indicator LED

HELLA Right Direction
Indicator LED

