
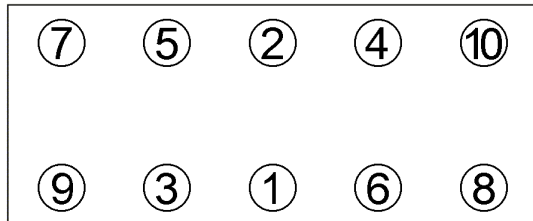


| | | |
|---|----------------|---|
| Anziehvorschrift für Zylinderkopf | 207.140 |  Das Original |
| Tightening Instructions for Cylinder Head | | |
| Instructions de serrage pour culasse | | |
| Prescripciones de apriete para culatas | | |
| passend für / suitable for adaptable à / adaptable a | | Jaguar/Land Rover |

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete



| | | |
|-------------|---|-------|
| Anziehen/ | * | 10 Nm |
| Tightening/ | | 20 Nm |
| Serrage/ | | 53 Nm |
| Apriete | □ | 180° |
| | ➤ | 53 Nm |
| | ➤ | 90° |
| | ➤ | 120° |

Zeichenerklärung / Explanations / Explication / Explicacion

| | | | | |
|---|---|------------------------------|--------------------------------|---------------------------------------|
| * | neue Zylinderkopfschrauben verwenden | use new cylinder head bolts | utiliser des vis neuves | emplar tornillos nuevos |
| ★ | Warmlauf (80°C) | warm up time (80°C) | chauffage (80°C) | calentamiento (80°C) |
| □ | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
| ● | Setzzeit | relaxation time | durée de tassement | tiempo de espera |
| ➤ | Drehwinkel | torque angle | angle de serrage | ángulo de giro |

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 84,00 ; 1,50mm

Mot.: 204DTA / 204DTD / AJ200D

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

207.140