


<b>Anziehvorschrift für Zylinderkopf</b>	<b>445.920</b>	
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>Ford</b>
		Das Original

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



802.910  
M 11 x 121



- |             |   |    |       |
|-------------|---|----|-------|
| Anziehen/   | * | 1. | 30 Nm |
| Tightening/ | ➤ | 2. | 90°   |
| Serrage/    | ➤ | 3. | 90°   |
| Apriete     |   |    |       |

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Mot. 1,3 Ltr. OHV (HCS)  
44 kW (60 PS)  
Fiesta, Escort, Orion 8/1988 > 8/1995  
BL 13H, BL 13CFI, BL 13EFI  
Ka 6/1996 > 4/1999  
BL 13EFI

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*445.920\***