
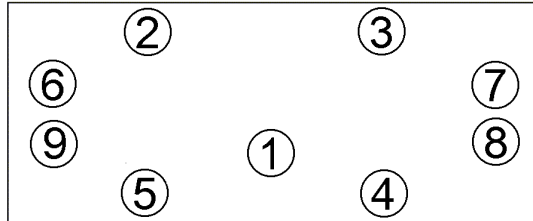


Anziehvorschrift für Zylinderkopf	540.490	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Subaru

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



Anziehen/ * 29 Nm
Tightening/ 59 Nm
Serrage/ 64 Nm
Apriete

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Subaru MC: EA82
1800 XT Coupe (XT) Turbo 4WD, 11.84-12.90, 88-100KW
LeoneII 1800 4WD, 11.84-12.90, 66-88KW
LeoneII 1800 Turbo 4WD, 11.84-12.90, 96-100KW
LeoneII StationWagon 1800 4WD 11.84-07.91 66-88KW
LeoneII Stat.Wag.1800Super4WD 03.89-12.90 96KW
LeoII Stat.Wag.1800SuperTurbo4WD 11.84-12.90 100K

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

540.490