
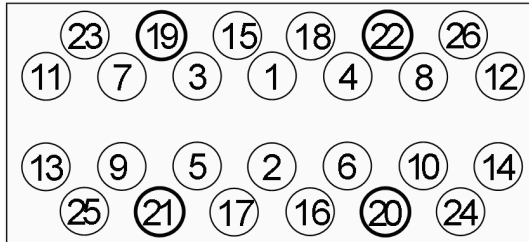


<b>Anziehvorschrift für Zylinderkopf</b>	<b>704.240</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>Iveco</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



Anziehen/ Tightening/ Serrage/ Apriete	1-14: * 40 Nm 80 Nm 120 Nm <input type="checkbox"/> 120 Nm ➤ 90° ➤ 90° ➤ 45°	15-26: * 40 Nm 80 Nm 120 Nm <input type="checkbox"/> 120 Nm ➤ 90° ➤ 90°
---	---	---

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
<input type="checkbox"/>	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

112 mm Ø

180E24 EUROTECH, 180E27 EUROTECH      ab 9/92<  
190E24 EUROTECH, 190E27 EUROTECH      ab 9/92<

Mot. 8360.46, 8360.46R

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*704.240\***