
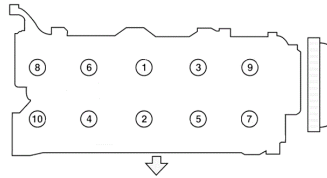


<b>Anziehvorschrift für Zylinderkopf</b>	<b>905.091</b>	
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>Honda</b>
	Das Original	

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



- |             |   |       |
|-------------|---|-------|
| Anziehen/   | * | 50 Nm |
| Tightening/ | ➤ | 100°  |
| Serrage/    | ➤ | 100°  |
| Apriete     | ☐ |       |
|             |   | 50 Nm |
|             | ➤ | 90°   |
|             | ➤ | 90°   |
|             | ➤ | 90°   |

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

✚ 1,25 mm

Mot: N16A  
1,6 ltr

Civic, CR-V, HR-V

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*905.091\***