
## **Product Awareness**

## **OP335**

## **PTFE Seal Installation**

- The Crankshaft Oil Seal included with this pump is designed with PTFE Sealing Technology.
- It is vital the alignment tool is used to position the pump drive onto the crankshaft accurately.
- The PTFE Oil Seal must be installed using the installation sleeve without any Oil or additional lubrication.
- Once installed the Seal must be left for a minimum of 4 hours to allow the seal to form a fluid proof seal.
- More information on PTFE seals can be found on our technical bulletin LEAF 9257 PTFE Oil Seal Guide

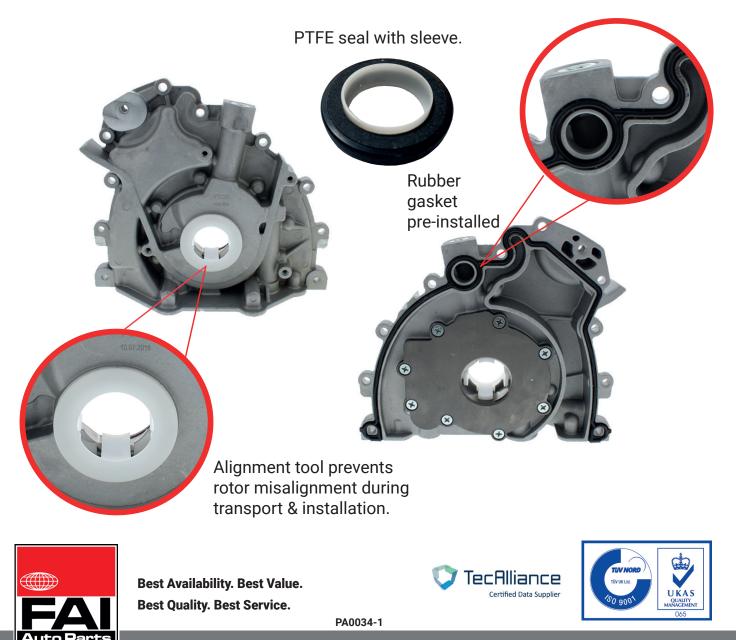

+44 (0) 1525 351800



## faiauto.com