

Explanation of codes**Clutch discs**

3 numbers	Outer diameter disc (mm)
First letter	S = Without spring sytem V = With spring system F = Spring system with clampsprings D = Spring system with pre-damper
Second letter	S = Facing not on cushion segments Z = 1 Facing ring on intermediate cushion segments L = Both Facings on cushion segments
Third letter	O = Organic facing (asbestos free) C = Ceramic facing
Extra letter	X = Xtend lifetime (facing bonded)

Clutch covers

3 numbers	Outer diameter pressure plate (mm)
First letter	E = Clutch cover without inner disc M = Clutch cover with inner disc
Second letter	D = Diaphragm spring operated V = Levers operated
Extra letter	T = Pull activated
Extra letter	N = With PTO hub
Extra letter	L = Release Bearing assembled on clutch cover
Extra letter	X = Xtend lifetime (Wear adjustment)
Extra number	2 = 2 Disc clutch
Extra number (1)	1 = 1 Disc assembled in clutch cover

(Release) bearings

	DK = With holder HK = Without holder LL = Loose (serial) bearing XH = Hydraulic operated bearing ZH = Air operated bearing
Extra letter	D = Push operated bearing
Extra letter	T = Pull operated bearing