





1

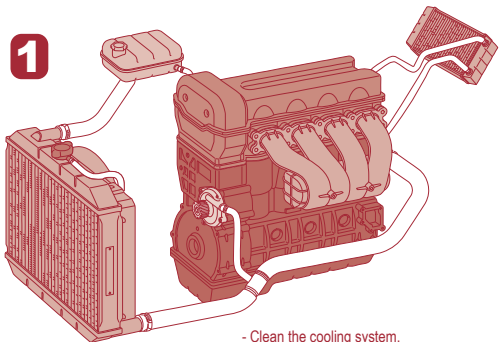


- Clean the cooling system.
- Limpiar el circuito de refrigeración.
- Reinigen Sie das Kühlsystem.
- Nettoyer le système de refroidissement.

2

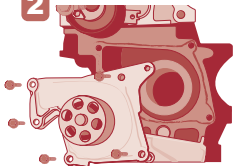


- Remove timing belt kit components and water pump.


3

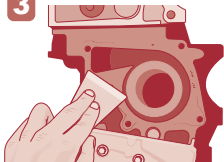


- Clean the block engine.

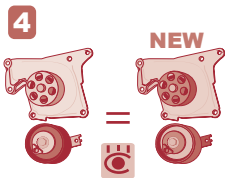


- Check that they are the same parts.

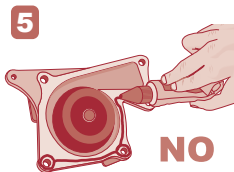


- Not use silicone joint if there is gasket.

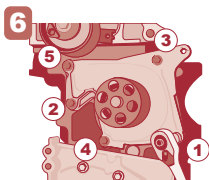


- Fit water pump in right order.

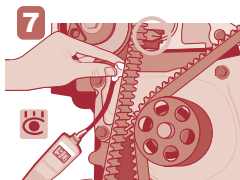

- Replace all timing belt kit components and check the correct belt tension.

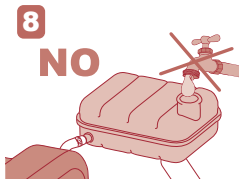

- No water allowed.

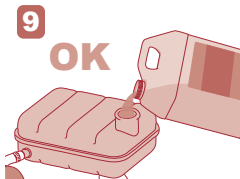

- Use the correct coolant liquid and not reuse the old liquid.