
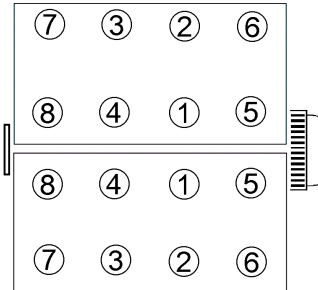


Anziehvorschrift für Zylinderkopf	586.270	
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Chrysler / Dodge / Fiat
		Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



949.390
M12x1,5x128



Anziehen/	*	30 Nm
Tightening/		45 Nm
Serrage/	➤	75°
Apriete	➤	50°
	☐	loosen 360°
		30 Nm
		45 Nm
	➤	75°
	➤	50°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 96 mm; \pm : 0,45 mm
mounting position: left
Mot.: ERB
3,6 ltr. V6

200, 300C, Grand Voyager, Challenger, Charger
Durango, Journey, Freemont,
Grand Cherokee, Wrangler

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

586.270