


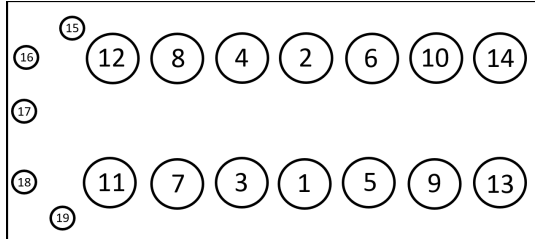
<b>Anziehvorschrift für Zylinderkopf</b>	<b>739.501</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>BMW</b>

Schraubenkopf / Head shape  
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete



794.480  
M 11x1,5x188



Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	Pos. 1-14 (M11) 30 Nm 90° 180°	Pos. 15-19 (M8) 19 Nm
---	-------------	---	--------------------------

Zeichenerklärung / Explanations / Explication / Explicacion

* ★ ☐ ● ➤	neue Zylinderkopfschrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
-----------------------	--	---	---	--

**Motortyp / Engine type / Type de moteur / Tipo de motor**

✚ 1,11 mm, Ø 82,0 mm

Mot.: B58 B30 B / B58 B30 C  
3,0 ltr

BMW: 3´G20/G21 M340i  
5´G30/G31 540i  
7´G11/G12 740i

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*739.501\***