


Anziehvorschrift
Tightening Instruction
Instructions de serrage
Prescripciones de apriete
安装说明

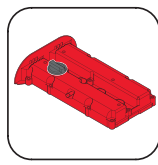






B04.000

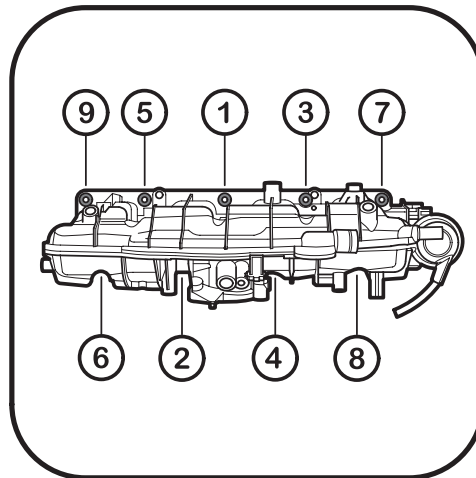

Das Original

Reihenfolge/Sequence/Commander/Sucesión/安装顺序



Step 标准步骤	Wert/Figure/Valeur/Valor/扭矩		
	metrisch/metric/métrique/métrico/公制	US Standard	
1. 	Pos. 1-9: 3 Nm	2.21 ft-lb	 
2. 	Pos. 1-9: 10 Nm	7.38 ft-lb	

Motortyp / Engine type / Type de moteur / Tipo de motor/发动机型号

Audi

CAWB, CBFA, CCTA, CCZA, CCZC, CDAA

Seat

CCZA, CCZB, CDAA

Skoda

CCZA, CDAA, CDAB

VW

CAWA, CAWB, CBFA, CCTA, CCTB, CCZA, CCZB, CCZC, CCZD, CDAA, CDAB, CGYA

