


Anziehvorschrift
Tightening Instruction
Instructions de serrage
Prescripciones de apriete
安装说明

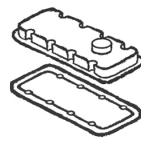




835.650



Das Original

Reihenfolge/Sequence/Commander/Sucesión/安装顺序

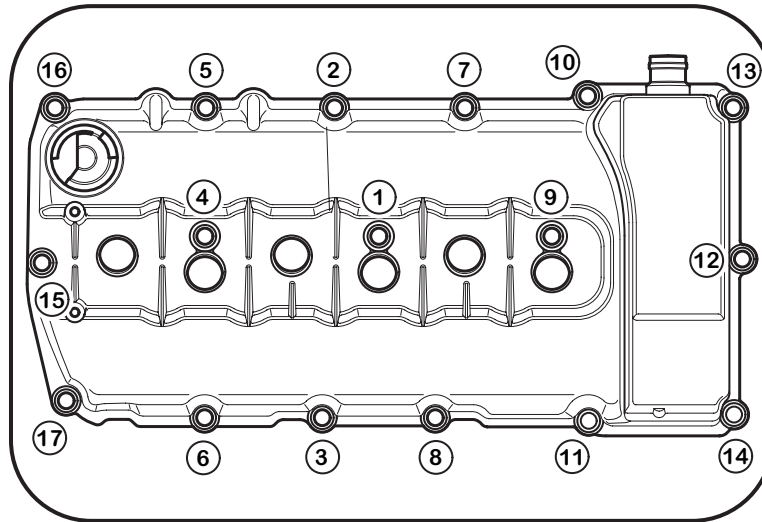

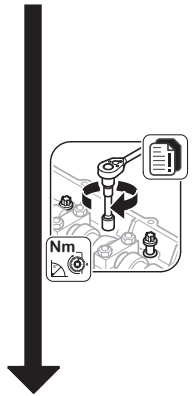Step 标准步骤	Wert/Figure/Valeur/Valor/扭矩		
	metrisch/metric/métrique/métrico/公制	US Standard	
1. 	Pos. 1-17 (M6x30): 10 Nm	7.38 ft-lb	

Motortyp / Engine type / Type de moteur / Tipo de motor/发动机型号

Audi / Skoda / VW / Porsche
 Q7 (3.6 FSI quattro)
 SUPERB II (3.6 FSI 4x4), SUPERB II Kombi (3.6 V6 4x4)
 Atlas, CC (B7 3.6 FSI 4motion), EOS (3.6 V6), PASSAT (B6 3.2 FSI 4motion), PASSAT (B6 3.6 R36 4motion),
 PASSAT (CC B6 3.6 FSI 4motion), PHAETON (3.6 V6 4motion), TOUAREG (3.6 V6 FSI)
 Cayenne (3.6l VR6)

