

FITTING INSTRUCTIONS
 EINBAUANLEITUNG
 INSTRUCCIONES DE MONTAJE
 NOTICE DE MONTAGE
 ISTRUZIONI DI MONTAGGIO
 INSTRUKCJA MONTAŻU
 INSTRUÇÕES DE MONTAGEM
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ










micronAir®

Fiat
 500 12.11 →
 500 C 12.11 →
 Panda (139) 02.12 →

80004407
 CP1451
 MP412

Lancia
 Ypsilon (846) 02.12 →

80004544
 CC1451
 MC912

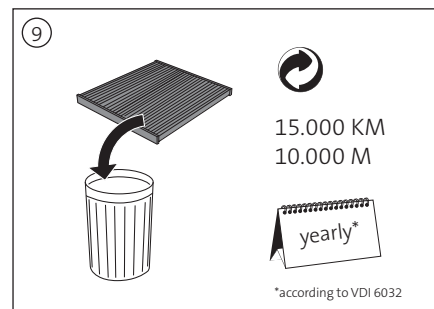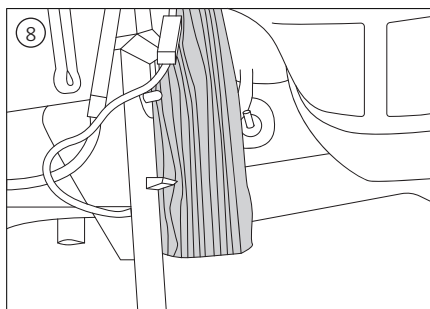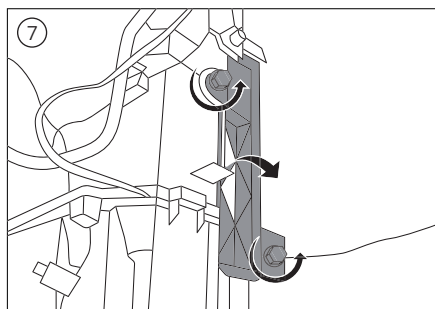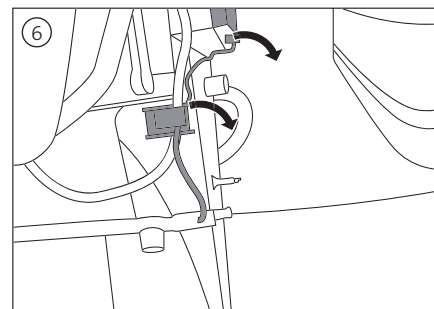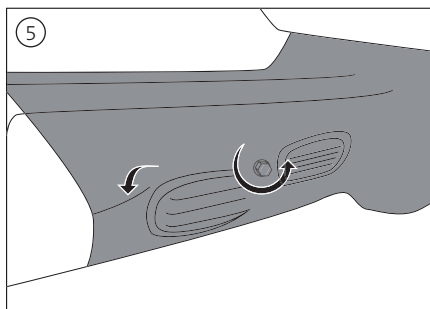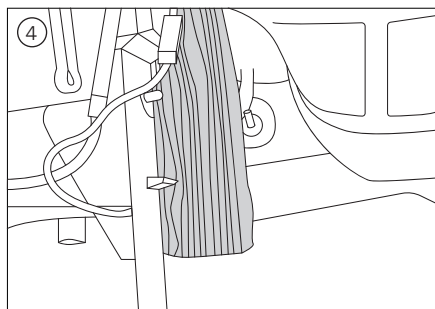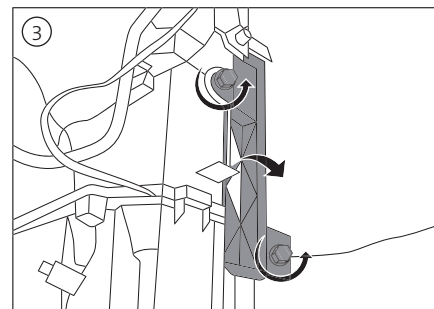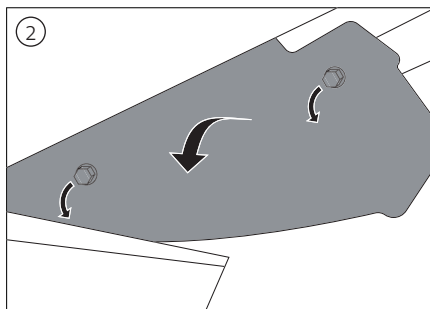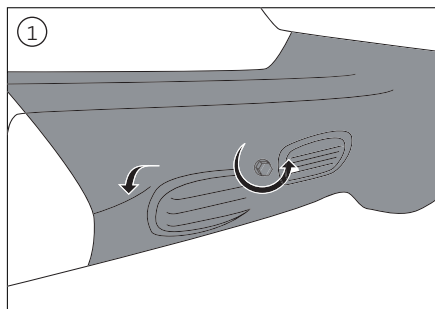

02-CA-599-March-2019-EN

a brand of

 **FREUDENBERG**

