

FITTING INSTRUCTIONS  
 EINBAUANLEITUNG  
 INSTRUCCIONES DE MONTAJE  
 NOTICE DE MONTAGE  
 ISTRUZIONI DI MONTAGGIO  
 INSTRUKCJA MONTAŻU  
 INSTRUÇÕES DE MONTAGEM  
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ





micronAir®

Citroën C3 Aircross A88 09.17->  
 Opel Crossland X I 04.17->

49415857  
 CP1564  
 MP495

49415858  
 CC1564  
 MC995

Citroën C3 Aircross (A88)

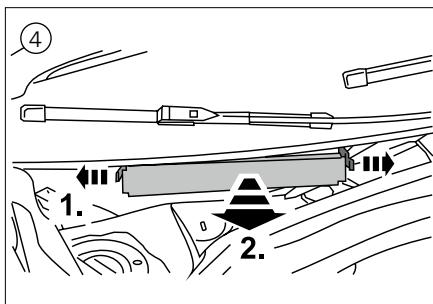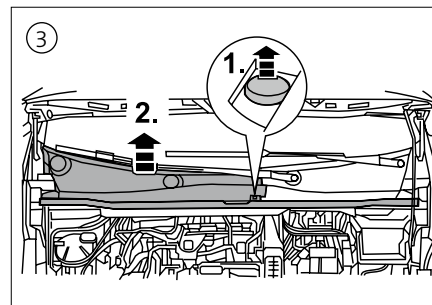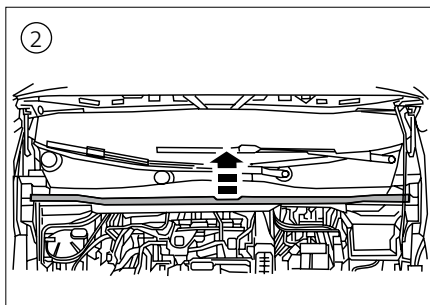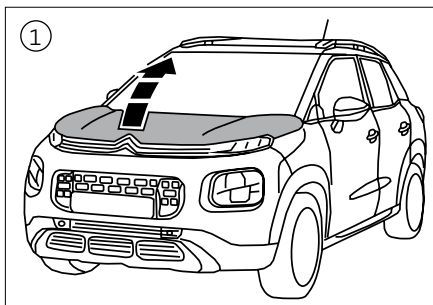

Opel Crossland X

