


## HOW TO MOUNT THE REAR SHOCK ABSORBERS

Renault Megane II



FI075EU

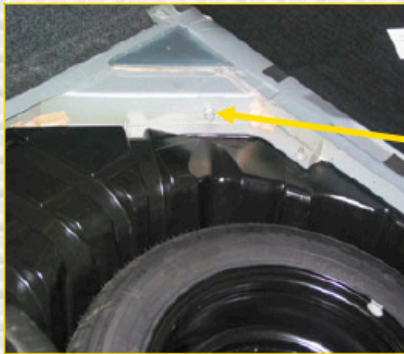


### Removal of the shock absorbers:

- 1.A** - remove the floor carpet in the trunk and release the shock absorber upper mounting bolt.
- 2.A** - jack-up the vehicle and block it safely.
- 3.A** - under the vehicle, release the clamps of the lower train protection.
- 4.A** - remove the lower shock absorber mounting nut.
- 5.A** - remove the old shock absorber.

### Re-assembly:

- 1** - position the new shock absorber and refit the lower mounting nut without fully tightening.
- 2** - lower the vehicle until the upper shock absorber mounting and the hole in the trunk are aligned.
- 3** - refit the upper mounting bolt without fully tightening.
- 4** - put the vehicle back with its wheels on the ground.
- 5** - tighten the shock absorber mountings to the specs. set below.

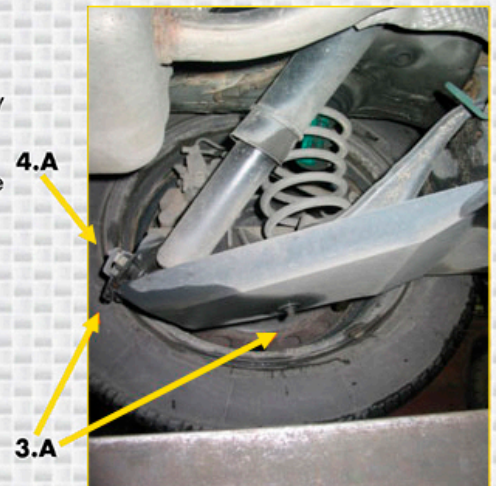

TIGHTENING TORQUES	daN.m
Upper mounting	6.2
Lower mounting	10.5