

## FITTING INSTRUCTION


VW Touran



FI079EU

### Access to the top mount of the struts

- The top mounts are accessible after removing cover below:

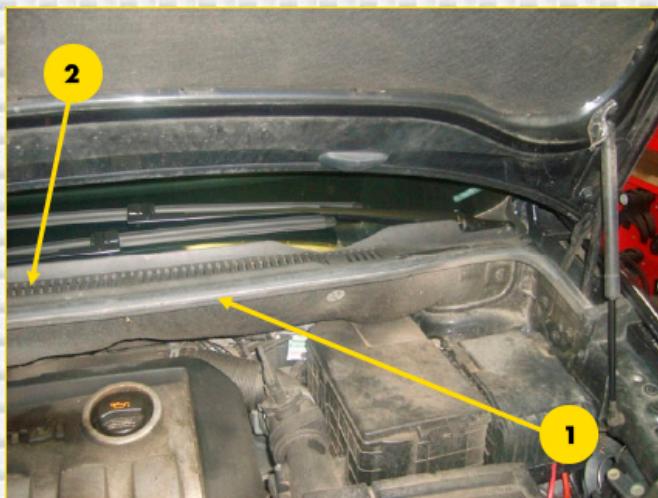

TORQUE SETTINGS	daN.m
Upper mounting	1.5*
Top stem nut	6
Lower mounting	7

\*Then angular tightening with 90°

- 1 – Remove windscreen wiper arms (use an adapted extractor, if necessary).
- 2 – Remove centre section bulkhead trim (1),
- 3 – Remove wiper motor and linkage. (2).
- 4 – Remove hexagonal bolts for shock absorber upper mounts and remove strut.