

FOTO 1

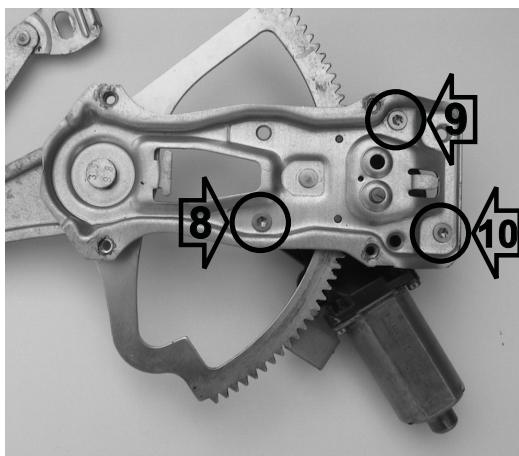


FOTO 2



FOTO 3

PROCEDURE TO FOLLOW:

- 1) Remove the electric window lift (photo 1).
- 2) Remove the screws no. 3, 4 and 5 of the motor (photo 2).
- 3) Unthread the gear from the original motor and insert that in endowment (photo 3).
- 4) Fix the metal plug in position 12 and 13 (photo 4).
- 5) Put and fasten the motor in position 14 and 15 (photo 5 and 6).
- 6) Insert the electric window lift and fix it in position 16, 17, 18, 19, 20, 21 and 22 (photo 7).
- 7) Carry out the electrical connections.

OPERAZIONI DA ESEGUIRE:

- 1) Togliere l'alzacristalli elettrico (foto 1).
- 2) Togliere dal motore le viti 8, 9 e 10 (foto 2).
- 3) Sfilare l'ingranaggio dal motore originale e inserire quello in dotazione (foto 3).
- 4) Fissare la piastrina in posizione 12 e 13 (foto 4).
- 5) Inserire e fissare il motore in posizione 14 e 15 (foto 5 e 6).
- 6) Inserire l'alzacristallo elettrico e fissarlo in posizioni 16, 17, 18, 19, 20, 21 e 22 (foto 7).
- 7) Eseguire il collegamento elettrico.

MERCEDES SERIE E W 210

Porte Anteriori - Front Doors

Cod. 33094SM

MR 46SM

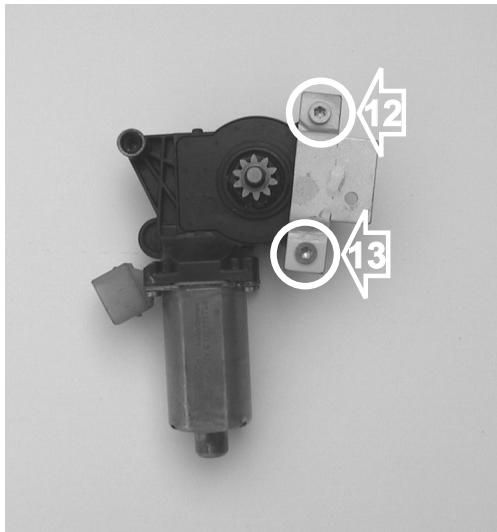


FOTO 4



FOTO 5

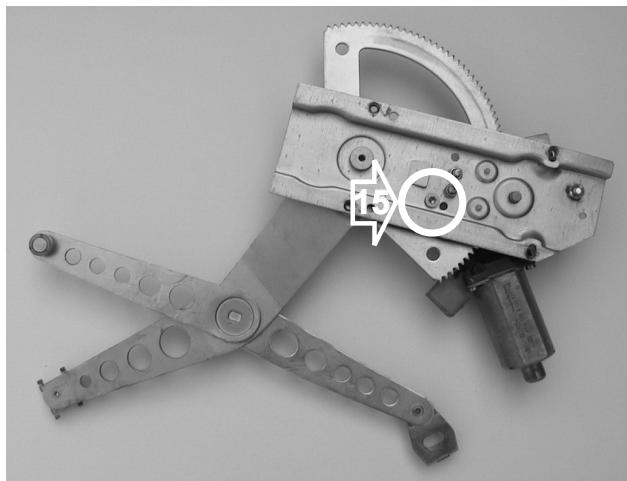


FOTO 6

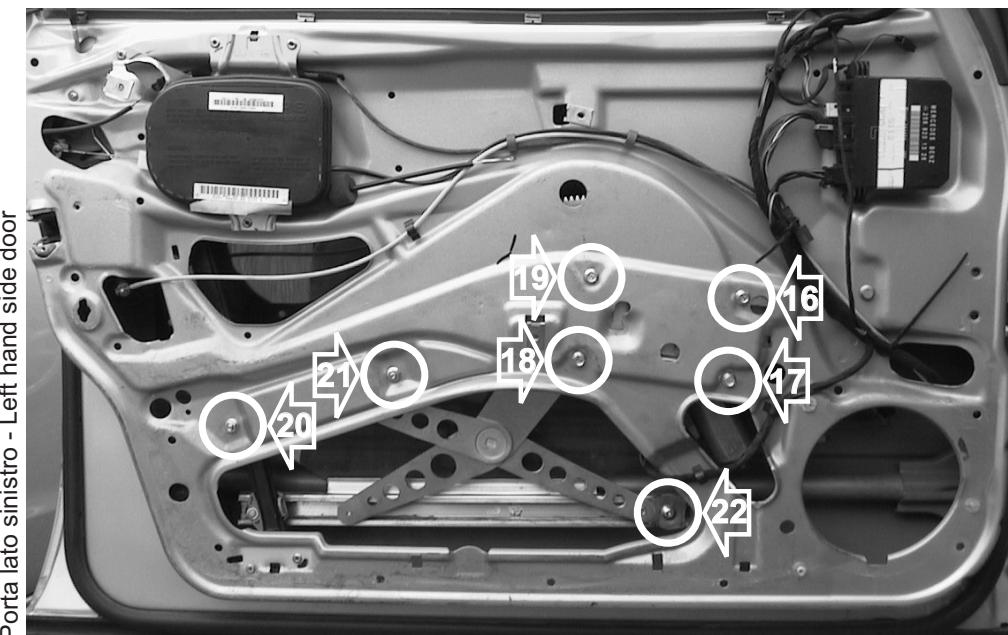


FOTO 7