




FITTING INSTRUCTIONS  
 EINBAUANLEITUNG  
 INSTRUCCIONES DE MONTAJE  
 NOTICE DE MONTAGE  
 ISTRUZIONI DI MONTAGGIO  
 INSTRUKCJA MONTAŻU  
 INSTRUÇÕES DE MONTAGEM  
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ

Audi A4 2001 →  
 Audi A6 2001 →





micronAir® blue

BL606  
 CB1088

Audi A4

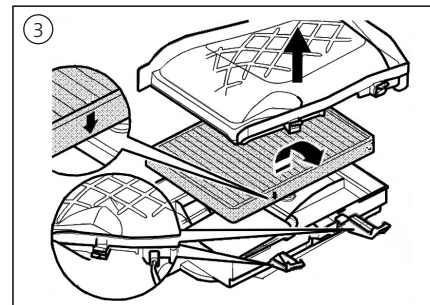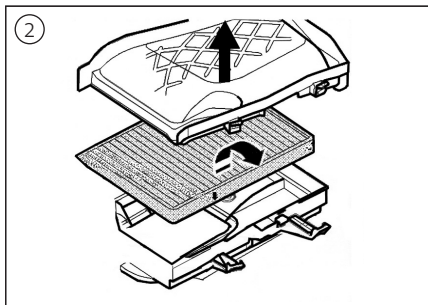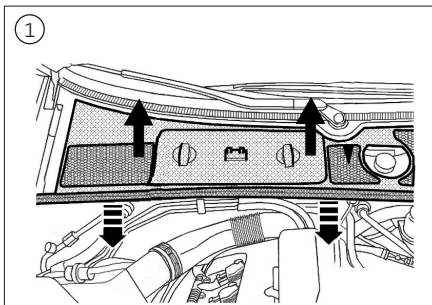

Audi A6

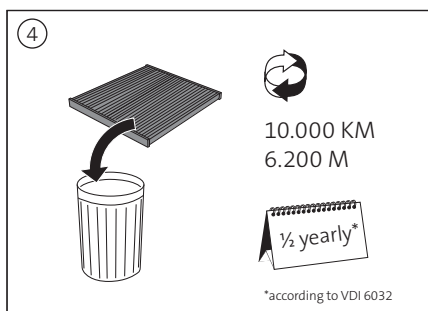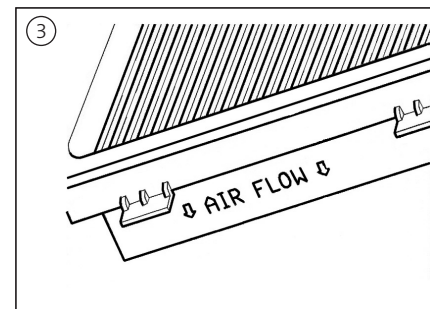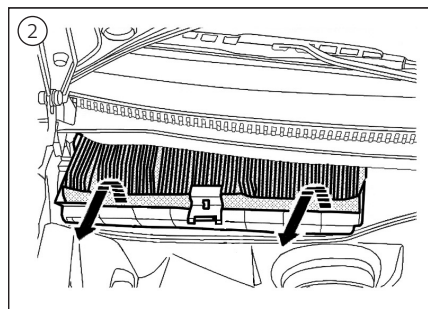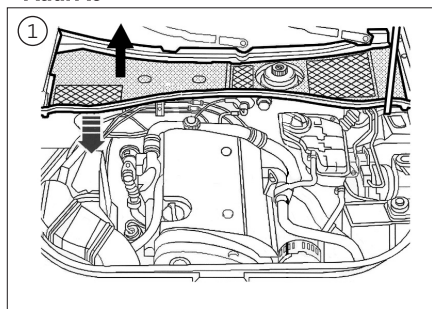

03-CA-532-December-2017-ML