


10'


VW Beetle

1

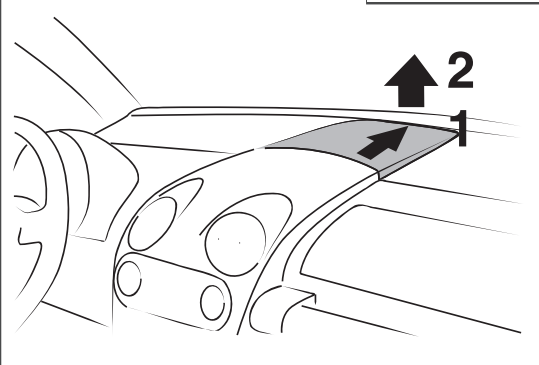


1

VW Bora - Golf IV

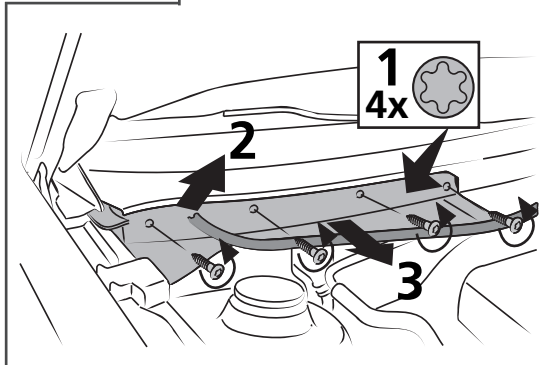


filters NC 2082CA
VOLKSWAGEN
New Beetle
VOLKSWAGEN
Bora - Golf IV

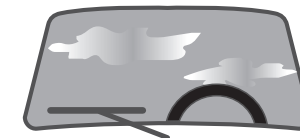


VW Beetle

2

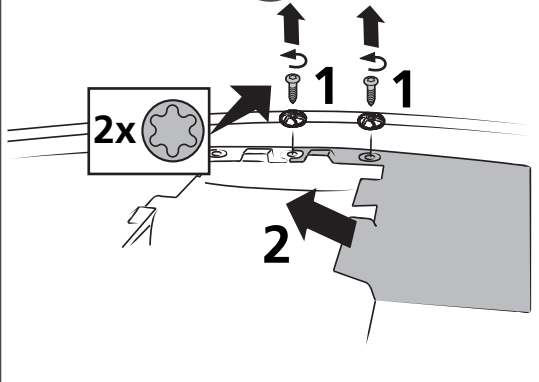


2

VW Bora - Golf IV

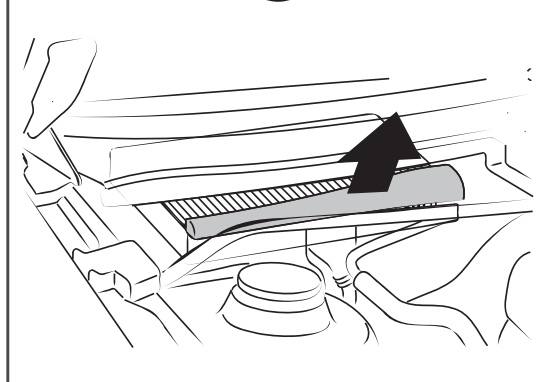


3

VW Bora - Golf IV

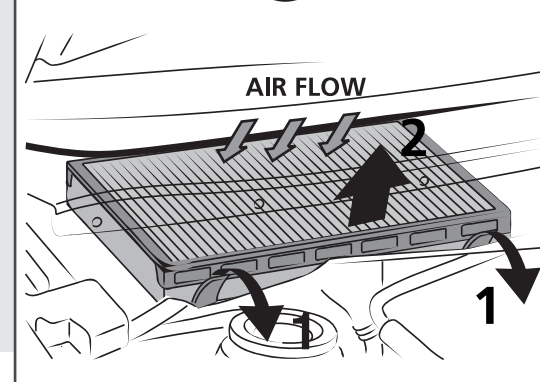


VW Beetle

3

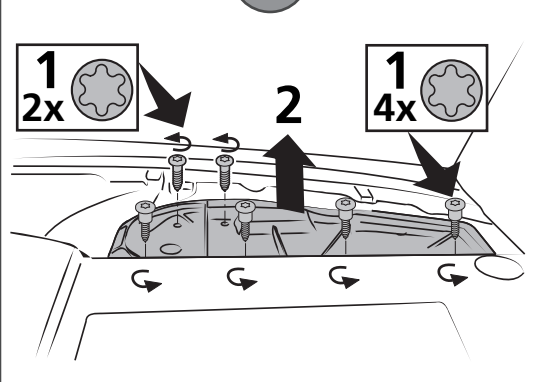


4

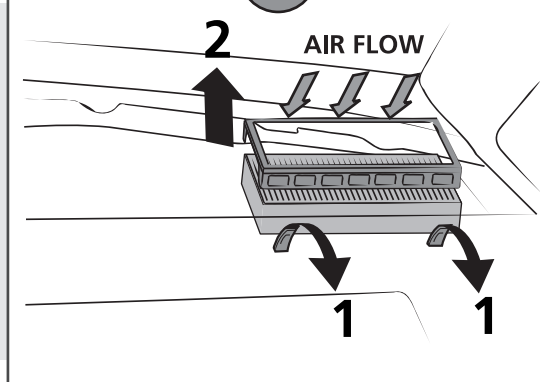

5

4

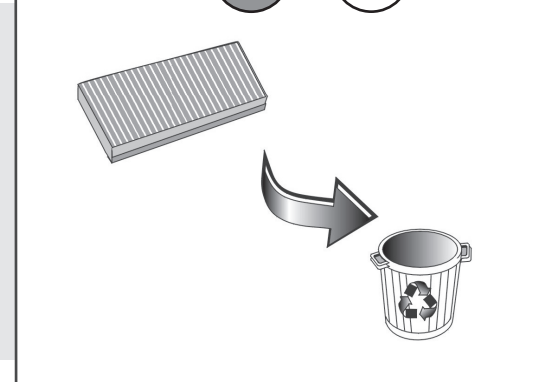

Per il montaggio procedere eseguendo le operazioni in senso inverso.

Continue mounting in reverse order of operations.

Le remontage s'effectue dans l'ordre inverse.

Der weitere Einbau erfolgt in umgekehrter Reihenfolge.

Para concluir la instalación, seguir el orden inverso.

