
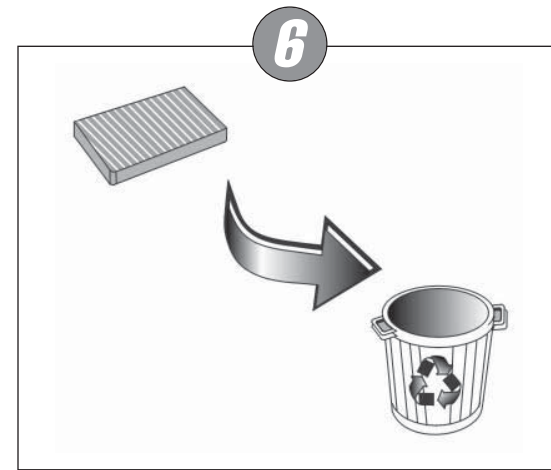
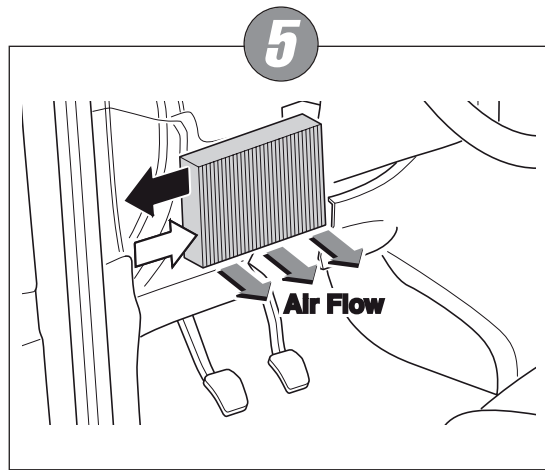


filters **NC2305**
NC2204CA

Ford Focus II (11/04→)
Volvo C30
Volvo S40 II (01/04→)
Volvo V50 (04/04→)

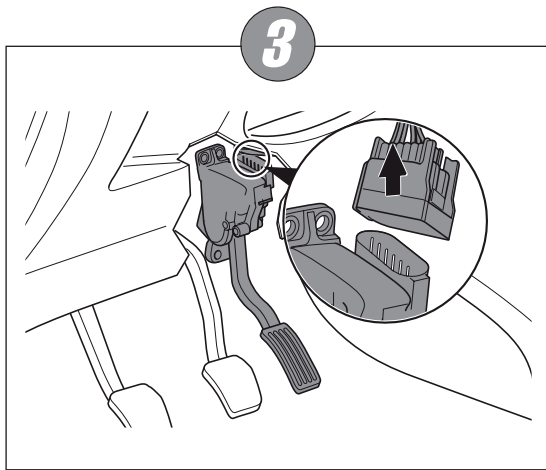

Per il montaggio procedere eseguendo le operazioni in senso inverso.

Continuomounting in reverse order of operations

Le remontage s'effectue dans l'ordre inverse.

Der weitere Einbau erfolgt in umgekehrter Reihenfolge

Para concluir la instalación, seguir el orden inverso.

