

This new version replaces all previous versions. Please replace SI-130815


Add BTS additive

Since the oil inlet as well as the oil outlet on this turbocharger are on the bottom when installed, the following instructions are important when adding the BTS additive:

Before starting the engine the BTS additive has to be added through the upper side of the turbocharger.

Remove the locking screw and re-secure the screw with 30Nm +/- 2Nm after adding the additive.

The additive has to be filled into the turbocharger through the open drilled hole.

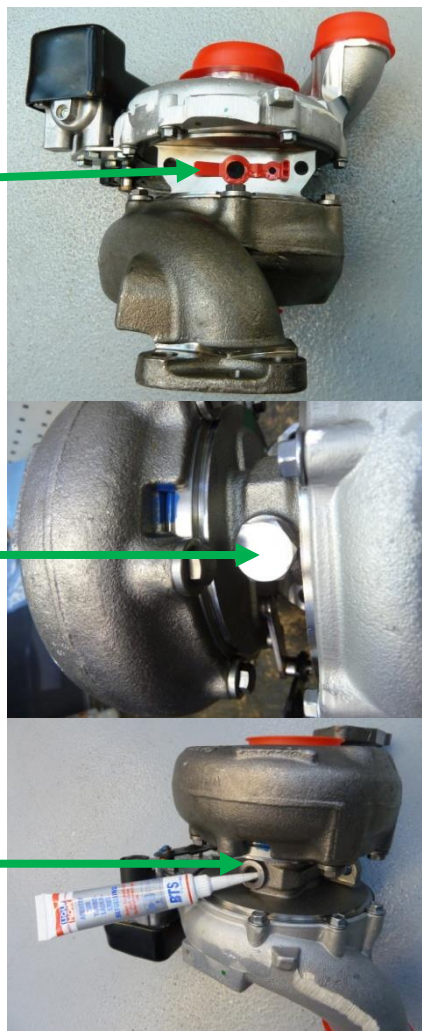

Vehicle Manufacturer: MERCEDES-BENZ, JEEP, CHRYSLER

Validity:

This service information is valid for the exchange of the turbocharger with **BTS reference:** T915234, T915235, T915668, T915699; **BTS Turbo Service Set reference:** T981384.

Please note:

OE-references are only for means of comparison.

The content of this Service Information is non-binding and is only for informational purposes.

The manufacturer specifications have to be adhered to.