
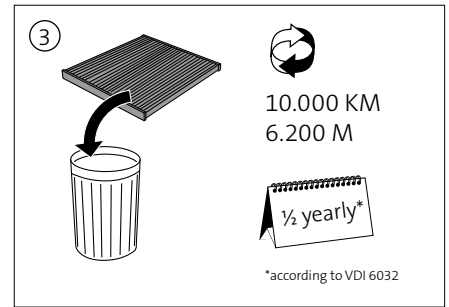
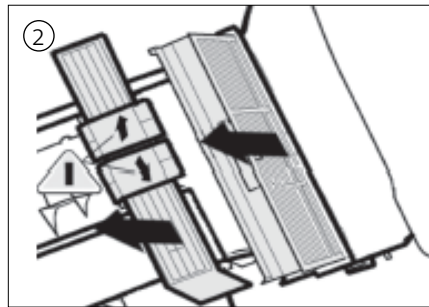


FITTING INSTRUCTIONS
 EINBAUANLEITUNG
 INSTRUCCIONES DE MONTAJE
 NOTICE DE MONTAGE
 INSTRUZIONI DI MONTAGGIO
 INSTRUKCJA MONTAŻU
 INSTRUÇÕES DE MONTAGEM
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ

micronAir®

Audi A2	PQ 24	05.00 ->	09.05	21652356
Mercedes-Benz	G-Glass W463	04.98 ->		CP1074
Seat Cordoba	PQ 24	10.02 ->		MP060
Seat	Ibiza IV	02.02 ->	09.10	21652357
Skoda	Fabia I	10.99 ->		CC1074
Skoda	Fabia II	03.07 ->	07.10	MC560
Skoda	Praktik	06.07 ->		
Skoda	Roomster	06.06 ->		
Volkswagen	Fox	04.05 ->		
Volkswagen	Polo (9N)	10.01 ->		
Volkswagen	Polo (6R)	06.09 ->	05.10	BL560

Audi, A2/Skoda Fabia

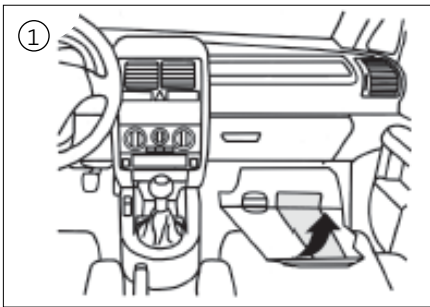

Seat Cordoba, Ibiza/VW Polo

