
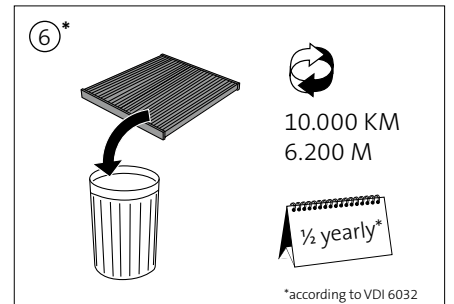
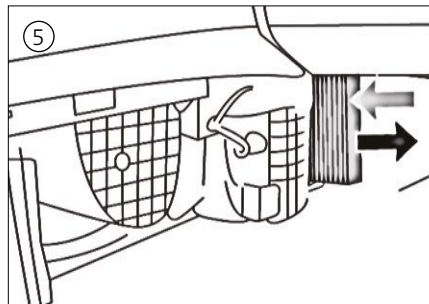
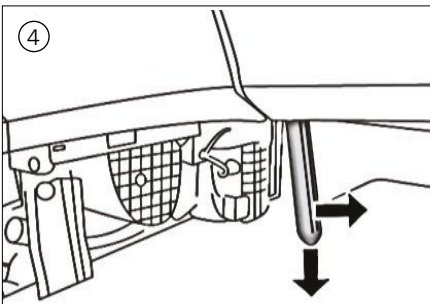
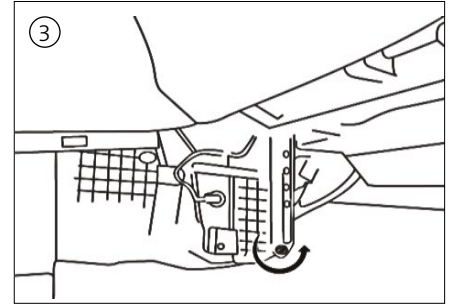
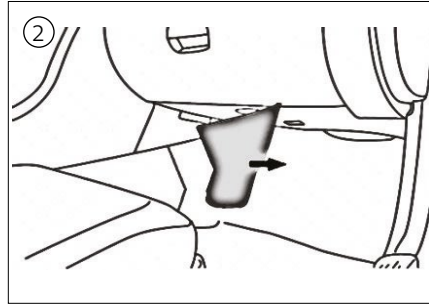


FITTING INSTRUCTIONS  
 EINBAUANLEITUNG  
 INSTRUCCIONES DE MONTAJE  
 NOTICE DE MONTAGE  
 ISTRUZIONI DI MONTAGGIO  
 INSTRUKCJA MONTAŻU  
 INSTRUÇÕES DE MONTAGEM  
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ

**micronAir®**

Alfa Romeo	MiTo	07.08 ->	80000541
Citroën	Nemo RL	02.08 ->	CP1221
Fiat	Fiorino RL	02.08 ->	MP193
Fiat	Grande Punto	07.05 ->	
Fiat	Punto Evo	01.10 ->	80000777
Fiat	Qube RL	08.10 ->	CC1221
Opel	Adam	01.13 ->	MC693
Opel	Corsa	11.06 ->	
Peugeot	Bipper RL	02.08 ->	49408482
			CB1221
			BL693

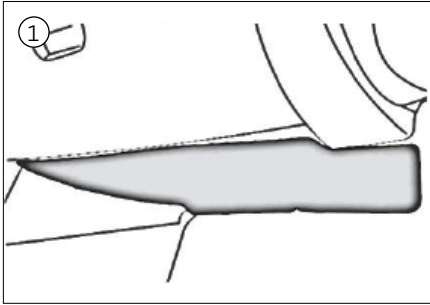

Opel Adam

Opel Corsa D

