
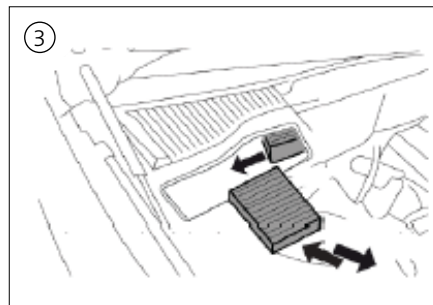


FITTING INSTRUCTIONS  
 EINBAUANLEITUNG  
 INSTRUCCIONES DE MONTAJE  
 NOTICE DE MONTAGE  
 INSTRUZIONI DI MONTAGGIO  
 INSTRUKCJA MONTAŻU  
 INSTRUÇÕES DE MONTAGEM  
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ

**micronAir®**

Citroën C3	II A 51	11.09 ->	80000666
Citroën C3	III B 618	10.16 ->	CP1260
Citroën C4	Cactus	05.14 ->	MP264-2
Citroën	DS3	03.10 ->	
Peugeot	207	02.06 ->	80000667
Peugeot	208	04.12 ->	CC1260
Peugeot	2008	03.13 ->	MC693
			49408809
			CB1260
			BL764-2

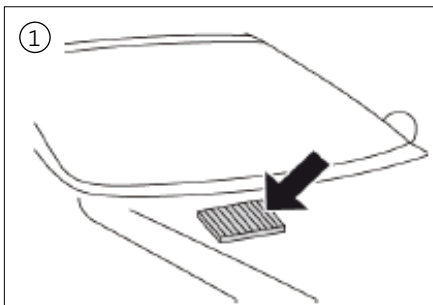

④

10.000 KM  
6.200 M

½ yearly\*

\*according to VDI 6032