




INSTALLATIONADVICE

from BG Automotive

TB-0774-012023

TC9550FK

TC9550FK

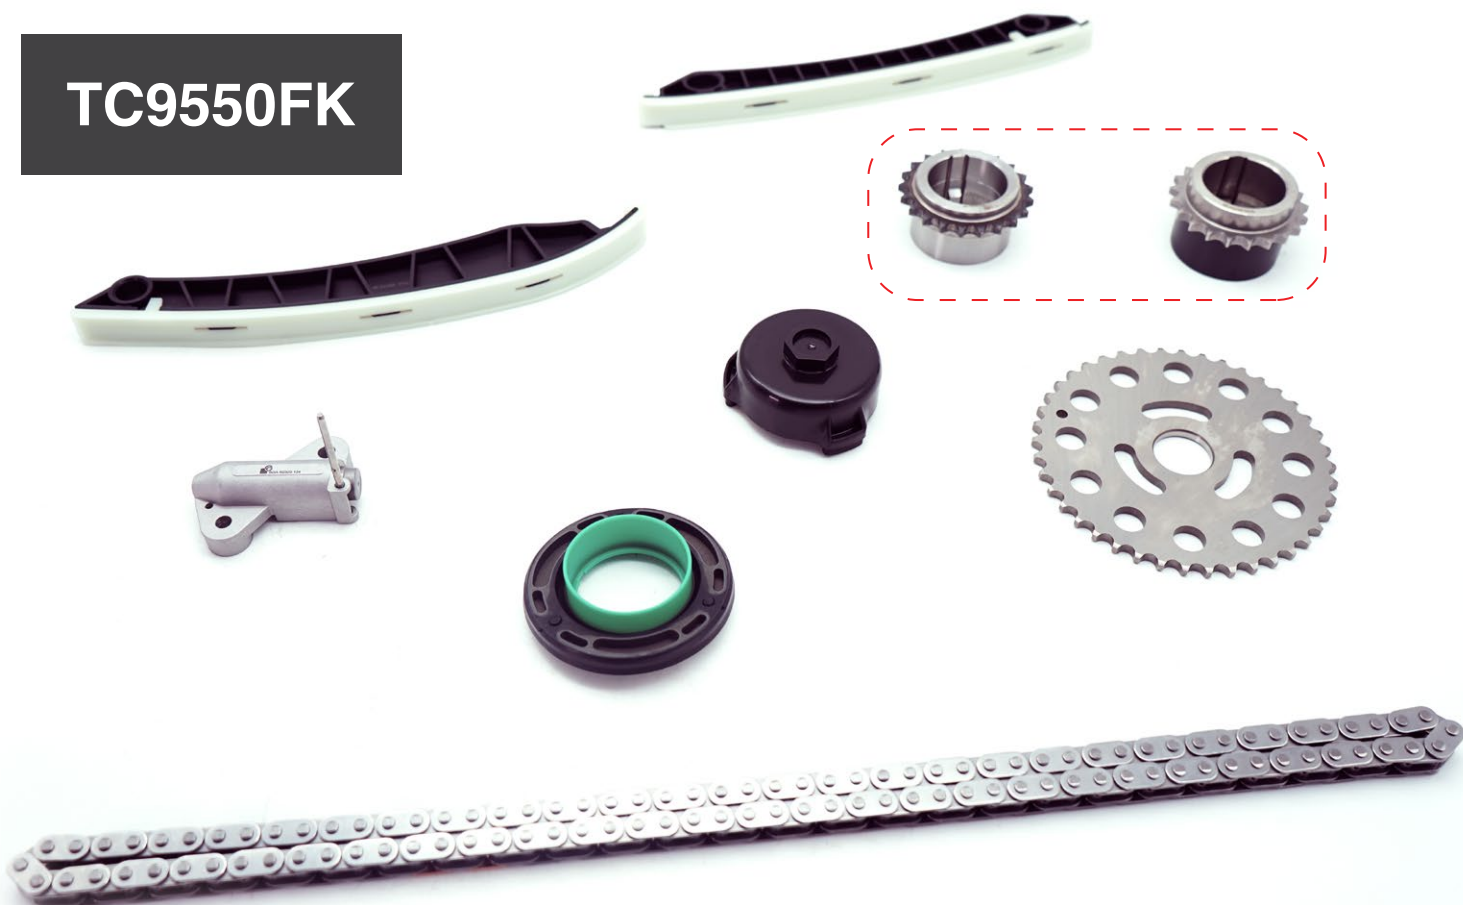

Fit the sprocket with the same depth as the one removed from the vehicle.



Montieren Sie das Kettenrad damit Tiefe als diejenige, aus der entfernt wurde das Fahrzeug.



Установите звездочку таким же глубиной, как та, что удалена от автомобиля.



Montare il pignone con lo stesso profondità come quella rimossa da il veicolo.



Monte la rueda dentada con el mismo profundidad como la que se quita de el vehiculo.




Monter le pignon avec le même profondeur que celle retirée de le véhicule.



Monte a roda dentada com o mesmo profundidade como aquele removido de o veículo.

38MM SPROCKET

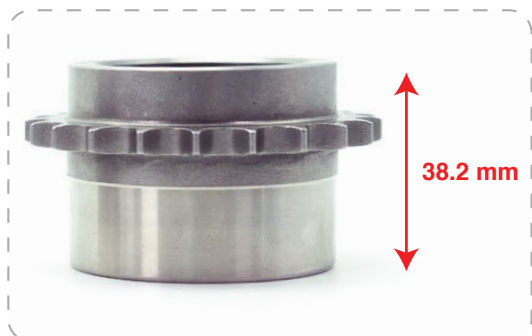

33MM SPROCKET



BGA products are to be replaced by an experienced automotive installer. This information is to be used as reference only. Always seek manufacturer specification.

For more information, call +44 (0) 1793 491 777

WWW.BGAUTOMOTIVE.CO.UK



/BGAUTOMOTIVEUK



@BGAUTOMOTIVEUK

PRODUCT BULLETIN