



Einbauhinweis/installation instruction Citroën Berlingo I/ Peugeot Partner I 1996- 2010

Vorne links/Front left (OE Ref. No. 9221.AS G1)

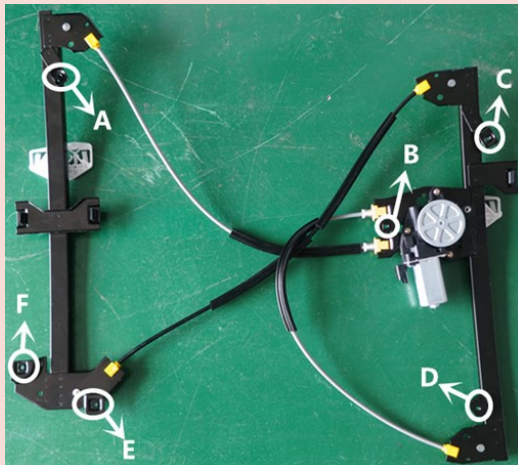

Vorne rechts/Front right (OE Ref. No. 9221.AS GM)

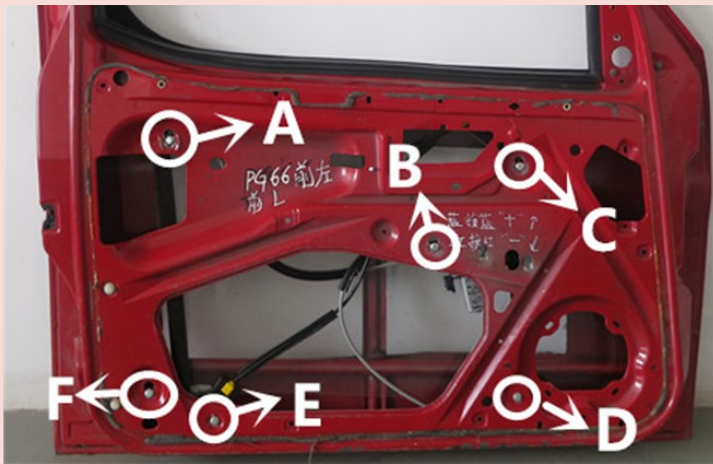