



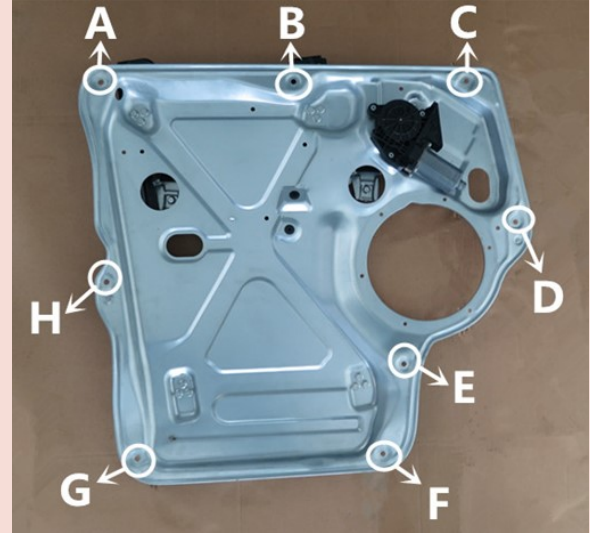

## Einbauhinweis/installation instruction VW Transporter T5 2003-2015

### Vorne links/Front left (OE Ref. No.: 7H0 837 753)

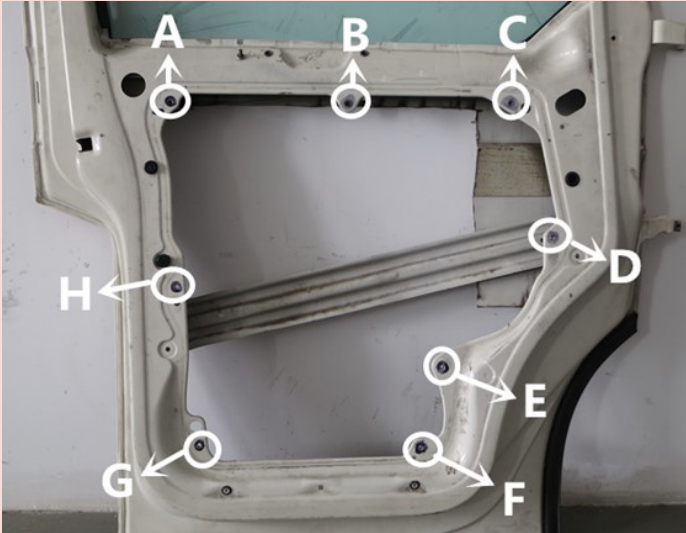

### Vorne rechts/Front right (OE Ref. No.: 7H0 837 754)

