
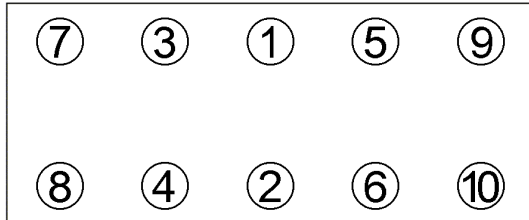


Anziehvorschrift für Zylinderkopf	818.276	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Nissan

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



710.080
M 10



Anziehen/ Tightening/ Serrage/ Apriete	E 13 * 39 - 44 Nm 69 - 74 Nm ★ 15 min 69 - 74 Nm	E 13 S, E 15 S E 16, E 16 i * 29 Nm 69 Nm □ 29 Nm 69 - 74 Nm
---	--	---

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 77,5 mm

Mot: E13, E15S, E16i, E16S

1,3 ltr.-1,6 ltr.
44-77 kW (60-105 PS)

Cherry, Prairie, Sunny I-II

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

818.276