


# Cylinder Head Tightening Instructions

**HG528**



	1	2	3	4	5	6
<b>Reference</b>	HG527	HG528				
<b>Piston</b>	0.69-0.74	0.75-0.84				

## Headbolt Tightening Sequence

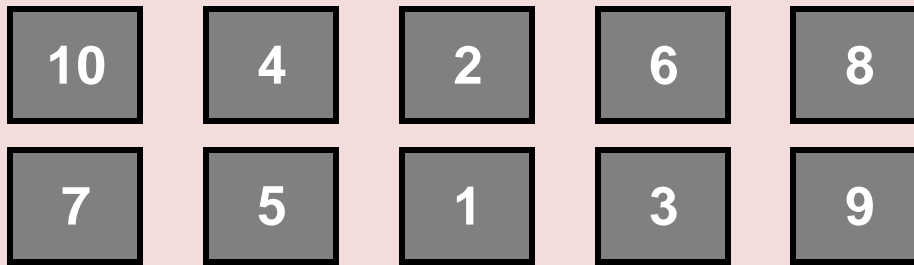

## Fitment Procedure

	Stage 1	Stage 2	Stage 3	Stage 4	Stage 5	Stage 6	Stage 7	Stage 8	Retighten?
<b>Bolt Type 1</b>									
Kilos	3 Kpm	7 Kpm	10 Kpm	-180°	7 Kpm	+120°			
Pounds	22 lbft	51 lbft	72 lbft	-180°	51 lbft	+120°			
Newton M's	29.4Nm	68.6Nm	98Nm	-180°	68.6Nm	+120°			
<b>Bolt Type 2</b>									
Kilos									
Pounds									
Newton M's									
<b>Bolt Type 3</b>									
Kilos									
Pounds									
Newton M's									
<b>Bolt Type 4</b>									
Kilos									
Pounds									
Newton M's									

## Fitment Key Description of Required Procedure

<b>-/+ X°</b>	Loosen or tighten the head bolt by the 'X'-value specified in the stage. Follow indicated tightening order.
<b>&lt;&gt;</b>	Run the engine until it reaches working temperature. Let the engine cool with the bonnet open for a minimum of four hours. Remove the expansion tank cap. Should retightening be required, loosen by 90° and then retighten observing the tightening procedure above.
<b>Retighten?</b>	If required, should be performed between 620-930 Miles (1000-1500 Km).